



## Osmo Action Surfing Tethers

Osmo Action Surfing Tethers

Osmo Action surfing tethers

Do you like to surf? Capture your displays in spectacular shots or record an original video from a first-person perspective! Surfing tethers designed for DJI Osmo Action, DJI Action 2 and DJI Osmo Action 3 will help you do that, and will help you avoid damaging or losing your camera while surfing. Note: the optimal temperature range for attaching the tether is from -10°C to 40°C. Mount the accessory only on flat, clean surfaces. Before use, it is recommended to press the mount for about 10 seconds after application and then leave it for about 30 minutes.

Ref: 6941565945525

### Specification

Brand

DJI

Name

Osmo Action Surfing Tethers

Diameter

30mm

Height (including rear adhesive sticker)

13.7mm

Weight

6g

Compatibility

DJI Osmo Action 3, DJI Action 2, DJI Osmo Action

Preço:

**€ 5.01**

Fotografia, Video, Cameras, DJI Osmo Action